

# Distributor Code for Alphastat Controller

Hold down the **“TEST”** button until the lights on either side of the controller stop flashing

Quickly press **“HWC”** then **“NEXT”** then **“PUMP”** in that order

The controller should now be in programming mode and displaying the “Pump Off” value. The letters **“PRG”** will flash every 10 seconds to indicate you are in programming mode.

Follow instructions on page 11 of the Installation Guide

To exit the programming mode at any time push the **“TEST”** (store) button.

Note any changes you have made to the programming mode on page 6 of the installation guide.

To avoid unauthorized tampering with the controller it is not recommended to give the distributor code out to people who not authorized to change the controller settings.